


XML020-24K INSTRUCTION MANUAL


For 42-80" TV


If you have any questions along the way, just message to us. We're ready to help!


⚠ CAUTION: PLEASE READ ENTIRE MANUAL PRIOR TO USE AND SAVE THESE INSTRUCTIONS

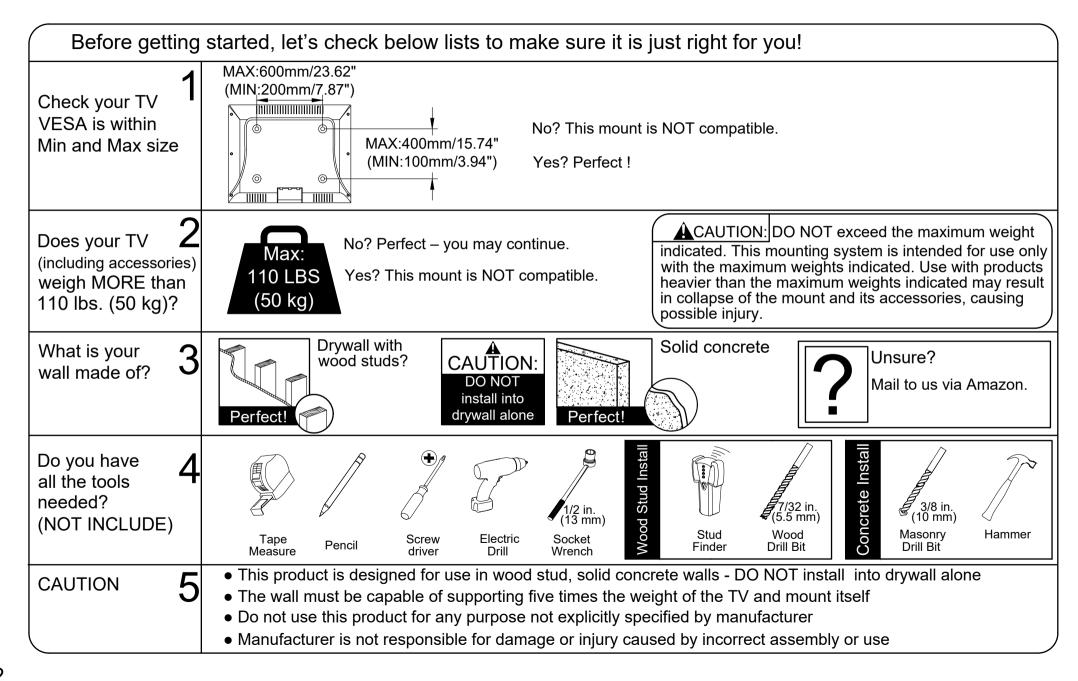



Dimensions

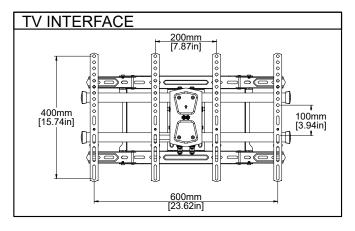


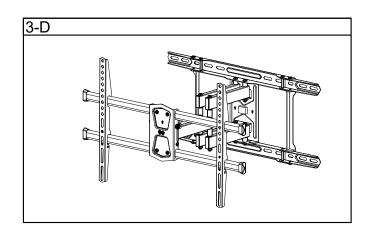


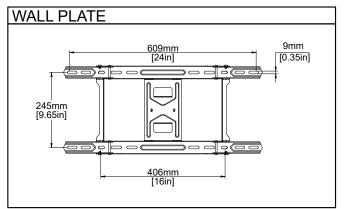


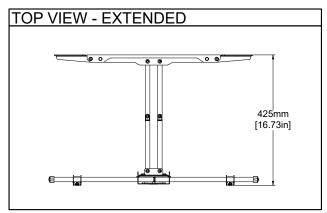

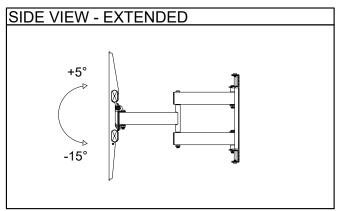

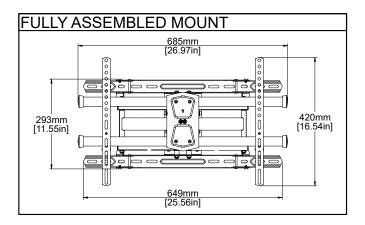

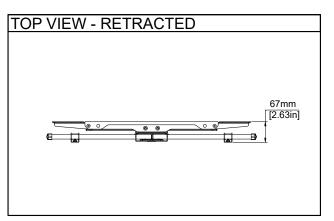

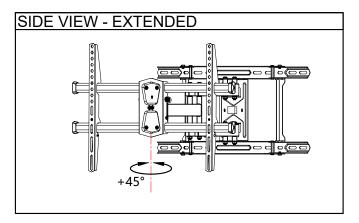

Parts and Hardware


▲WARNING: This product contains small items that could be a choking hazard if swallowed. Before starting assembly, verify all parts are included and undamaged. If any parts are missing or damaged, do not return the damaged item to your dealer; contact Customer Service.


Never use damaged parts!




NOTE: Not all hardware included will be used.

Parts and Hardware for STEP 1 **TV Brackets TV Screws Spacers** M8x22mm 10_{mm} M4x12mm M4x30mm **9** x4 0 2.5mm M6x17mm 0 M6x12mm M6x35mm **Washers** M8x25mm M8x45mm

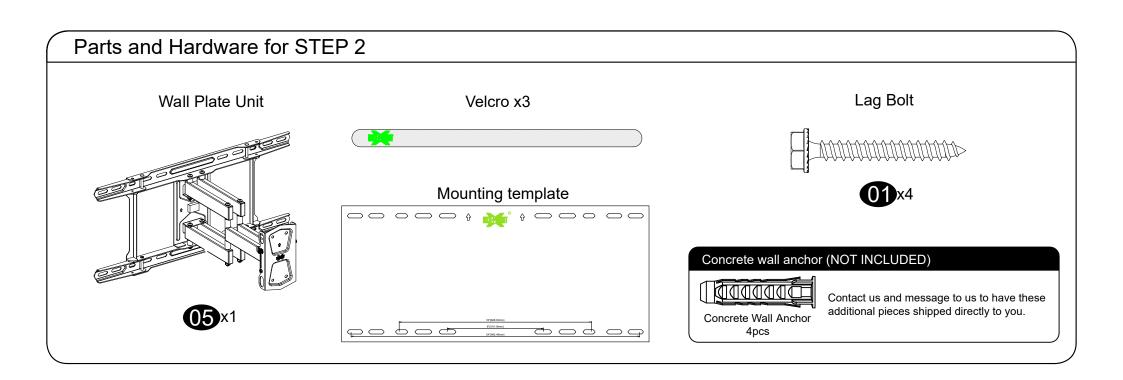

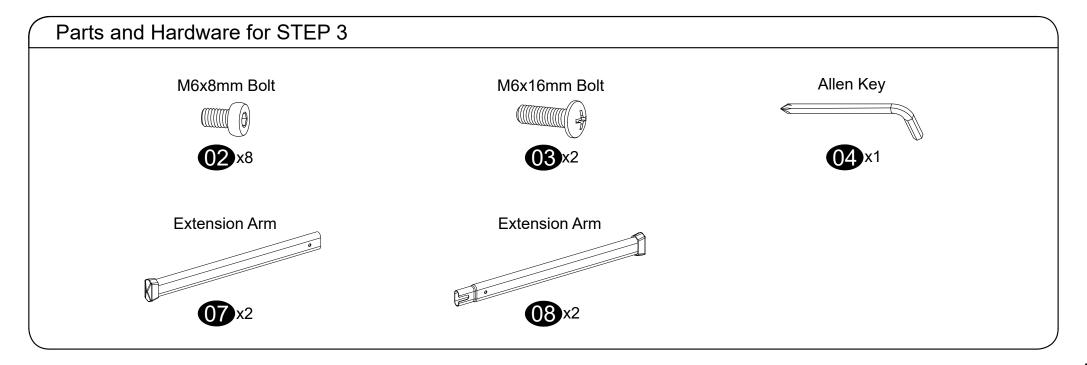

STEP 1 Attach Brackets to TV

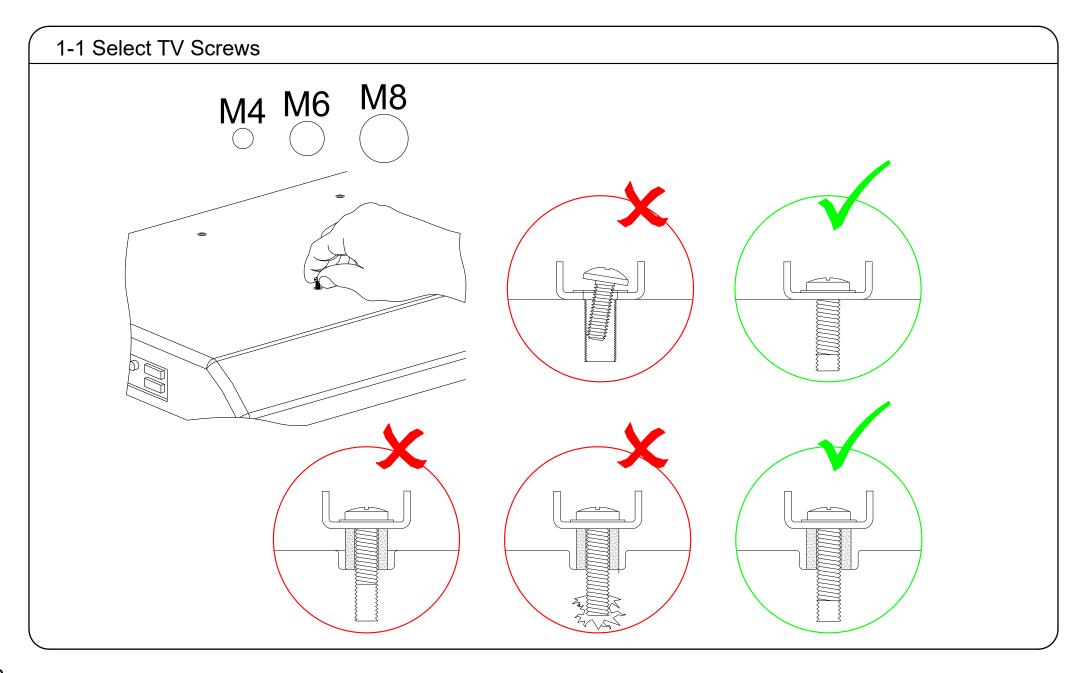


1-2 Figure out the suitable position of brackets HIGH MOUNTING HOLES LOW MOUNTING HOLES **0**6 TV BRACKETS MUST BE LEVEL INSTALL UP/DOWN IF NEEDED


1-3 Need Spacer?

1-4 Attach the TV Plate

I No, choose suitable screws and washers.

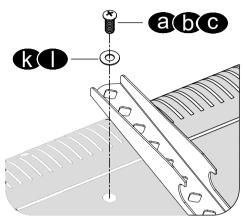


Yes, choose suitable screws, washers and spacers.

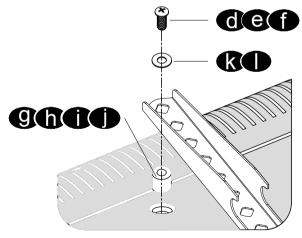

Tips: If you need to combine M6/M8(c/e/f) screws with 2.5mm spacers(i), you have to remove the inner circle.




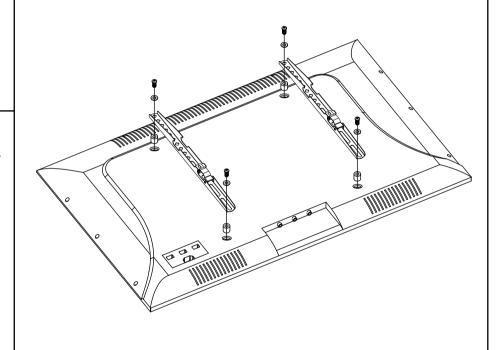


STEP 2A Attach Wall Plate to Wall Wood Stud Option

▲ CAUTION: Avoid potential personal injury or property damage!


- Drywall covering the wall, must not exceed 5/8 in. (16 mm)
- Minimum wood stud size: common 2 x 4 in. (51 x 102 mm) nominal 1½ x 3½ in. (38 x 89 mm)
- Maximum horizontal space between fasteners: 24 in. (609 mm)
- Stud center must be verified
- 1. Locate your studs. Verify and mark the center of the stud by finding the stud edges using a thin nail, or an edge to edge stud finder.
- 2. Position the mounting template at your desired height and line up the holes with your stud center line. Level the wall plate and mark the hole locations.

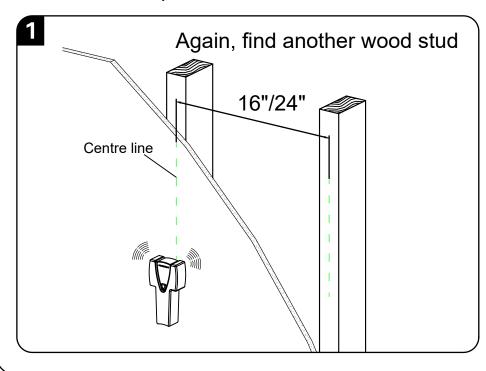


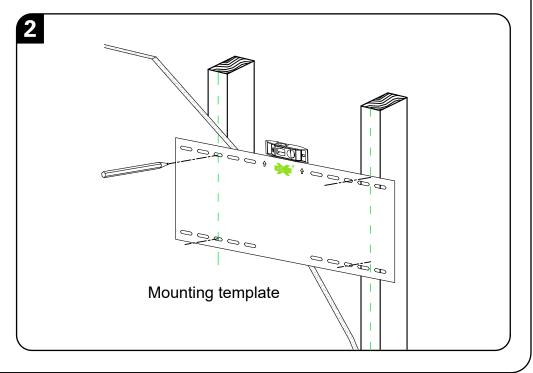

- 3. Drill pilot holes using a 7/32 in. (5.5 mm) diameter drill bit.
 - IMPORTANT: Pilot holes must be drilled to a depth of 2.5 in. (64 mm). Be sure to drill into the center of the studs.
- 4. Install wall plate **05** using four lag bolts **01**. Tighten the lag bolts only until they are pulled firmly against the wall plate.
 - ▲ CAUTION: Improper use could reduce the holding power of the lag bolt. **DO NOT over-tighten the lag bolts**.

Go to STEP 4 on PAGE 14.

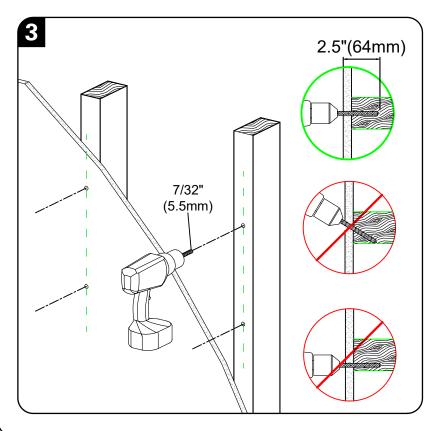


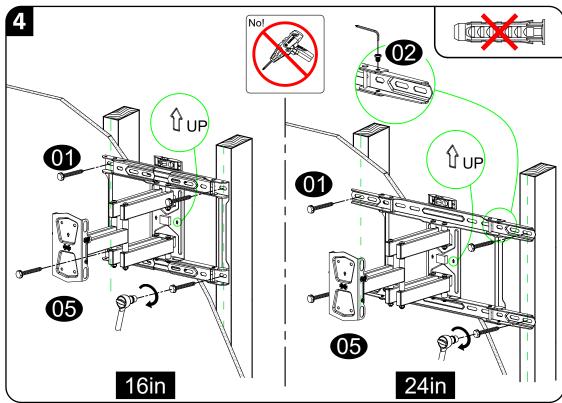


STEP 2B Attach Wall Plate to Solid Concrete Wall


▲CAUTION: Avoid potential personal injury or property damage!


- Mount the wall plate assembly **05** directly onto the concrete surface
- Minimum solid concrete thickness: 8 in. (203 mm)
- 1. Position the mounting template on the wall at your desired height. Level the wall plate and mark the hole locations.
- 2. Drill four pilot holes using a 3/8 in. (10 mm) diameter masonry drill bit.
 - ●IMPORTANT: Pilot holes must be drilled to a depth of 2.5 in. (64 mm).

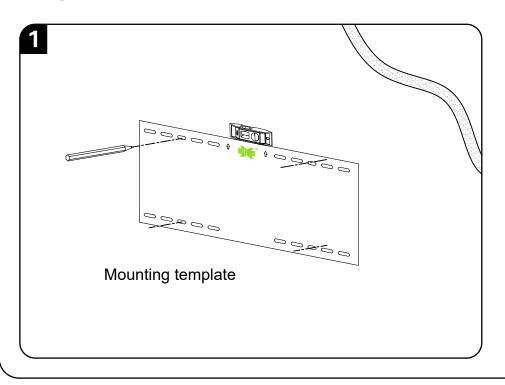

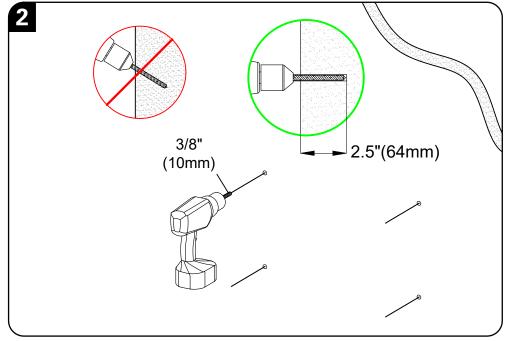


- 3. Insert four anchors.
- **A** CAUTION: Be sure the anchors are seated flush with the concrete surface.
- 4. Insert wall plate **05** using four lag bolts **01**. Tighten the lag bolts only until they are pulled firmly against the wall plate.
- ▲ CAUTION: Improper use could reduce the holding power of the lag bolt. **DO NOT over-tighten the lag bolts**.

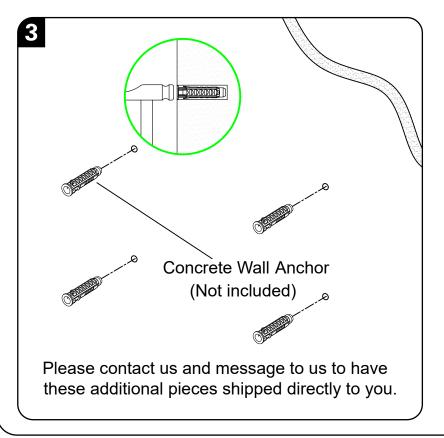

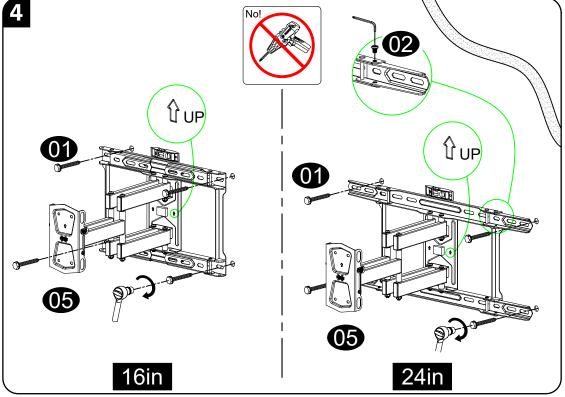


STEP 3 Extension Arms and end support Assembly

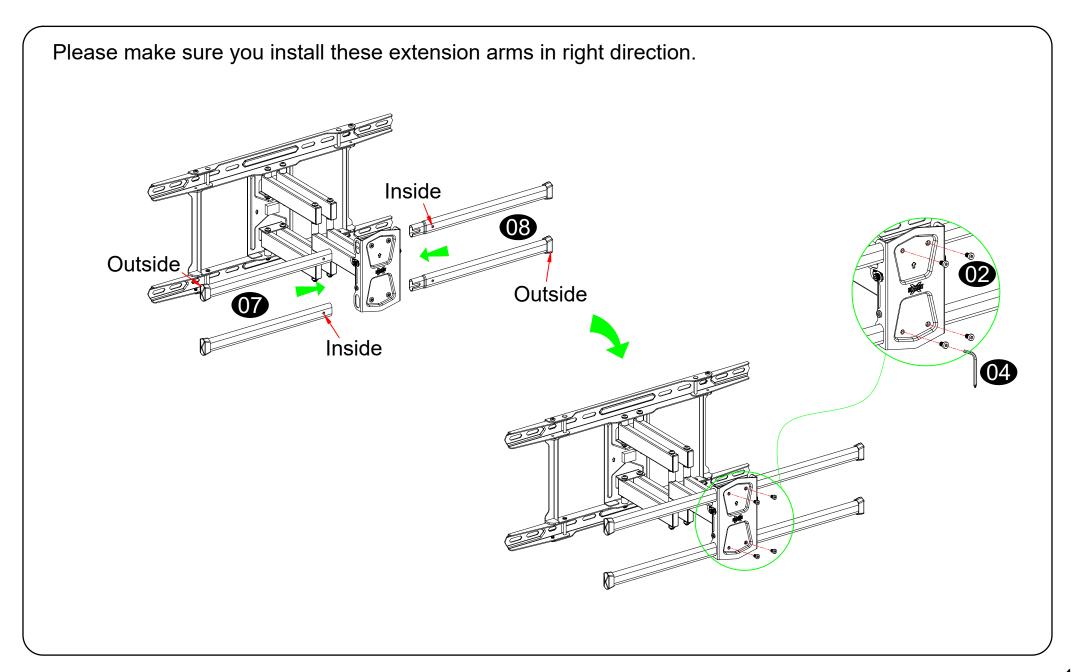


STEP 4 Wall Plate Installation Integrity Test

Before hanging TV, please try to pull the mount to make sure that it has been assembled on the wall tightly.

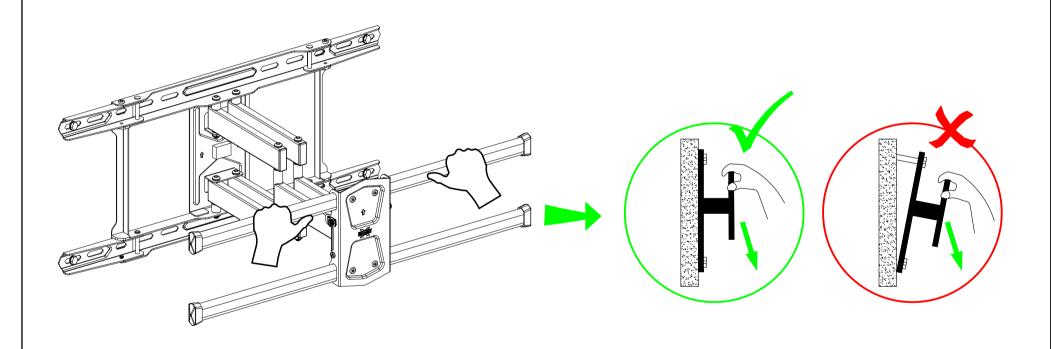

STEP 5 Hang and Secure TV to Wall Plate

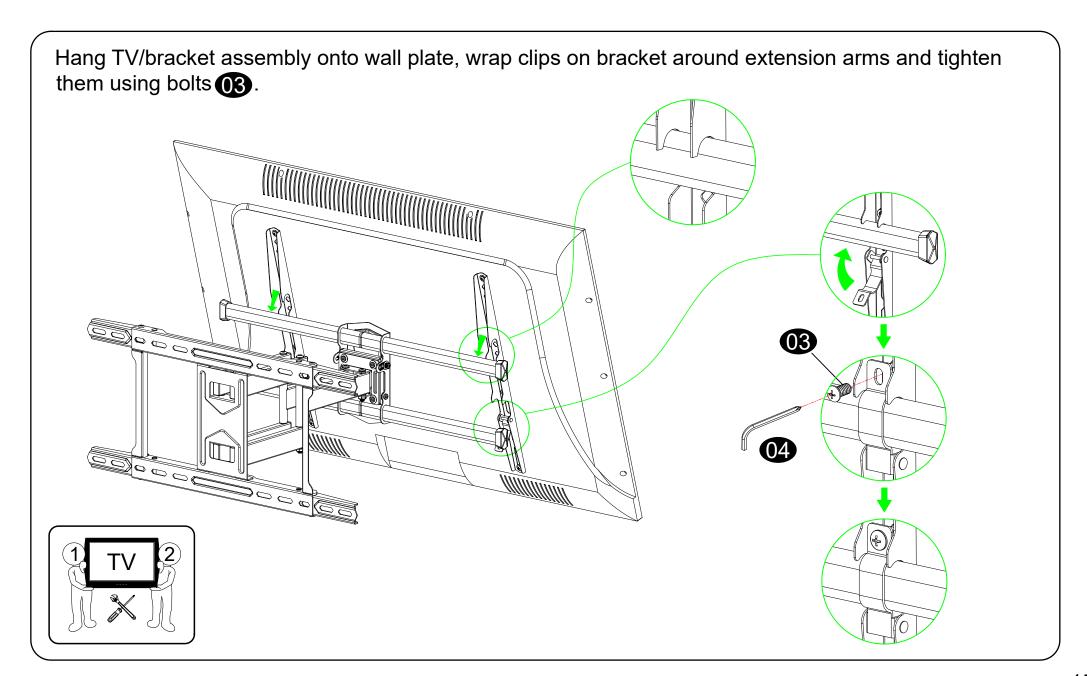

STEP 6 Adjustments

6-1 TV leveling adjustment (±4°): Loosen 4 leveling bolts on the rear of TV plate by maximum 2 turns, adjust to level, and retighten to secure. Loosen Tighten 04

6-2 Tilting angle adjustment (+5°/-15°): Pull TV to your desired angle then fasten 2 tilting bolts with Allen key **04**.

